

MONTAGEPLATTE-KIT ID NR. 164 313

MOUNTING PLATE KIT

Inhalt

Content


Stk. / pcs.	Material / material	Dimension / dimension
1	Montageplatte / mounting plate	54x34mm
3	Schraube / screw	KA30x6
2	Schraube / screw	M3x8



Loch und Schraubenauswahl

Hole and Screw selection

Pumpentyp pumpe type	Schraube screw	Stk. pcs.	Zeichnung picture	Werkzeug (nicht inkl.) tool (not incl.)
FL 10	KA30x6	3		Kreuzschlitzschraubendreher <i>phillips screwdriver</i>
NF 5	KA30x6	2		Kreuzschlitzschraubendreher <i>phillips screwdriver</i>
NF 1.5				
NF 10				
NF 11				
NF 1.11				
NF 25				
NF 1.25				
NF 30*	M3x8	2		Schraubendreher Torx T10 <i>screwdriver Torx T10</i>
NF 1.30				
NF 60*				

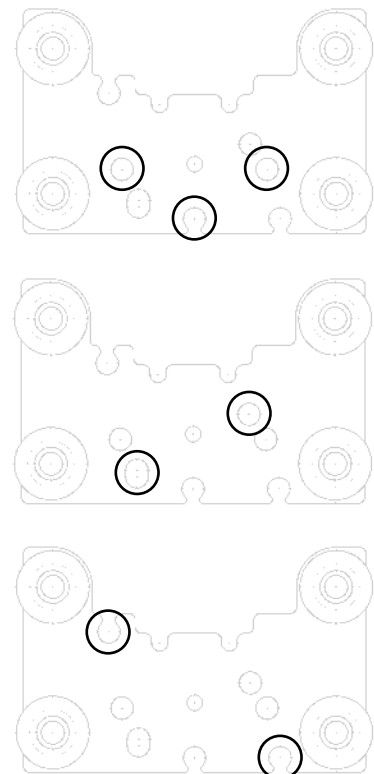

*) Montageplatte ist nicht mit BL48 Motor kompatibel (DCB)!
Mounting plate is not compatible with motor type BL48 (DCB)!

Masse

Dimensions

